

To update the SLICE MICRO™ or SLICE NANO™ Base firmware, you need:


1. Hardware: SLICE USB cable or SLICE SSI Cable Kit.

2. Software: ZIP file extracted on your PC. (This is typically provided by Technical Support via an attachment or web link.) The ZIP file contains the SLICE Firmware Updater program (eSENSING_FirmwareUpdater.exe) and required support files.

3. Firmware: Firmware version (*.sfw) you want to install.


4. Procedure:

1. With PC on, connect the SLICE Base to the PC via USB. Power-up the SLICE Base.
2. Start the SLICE Firmware Updater (eSENSING_FirmwareUpdater.exe). The screen will show the serial number of the connected Base:

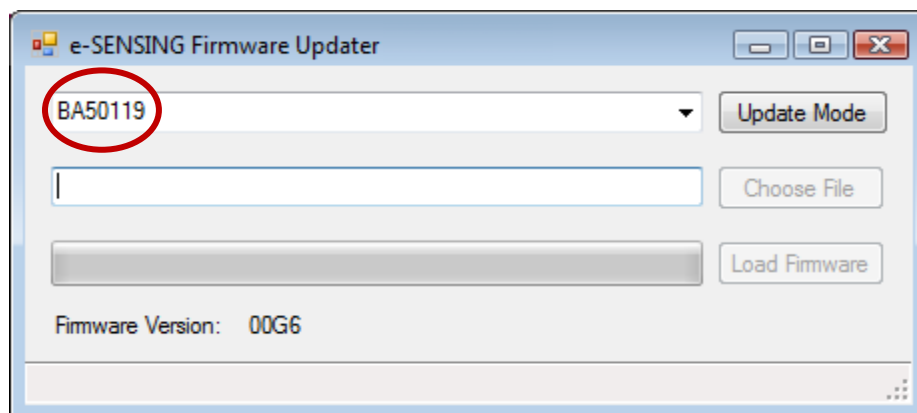

SLICE Base Firmware Update Procedure

3. Press **Update Mode**. The SLICE LEDs will flash. SLICE will disconnect, then reconnect. The internal ID of the SLICE Base will be shown:

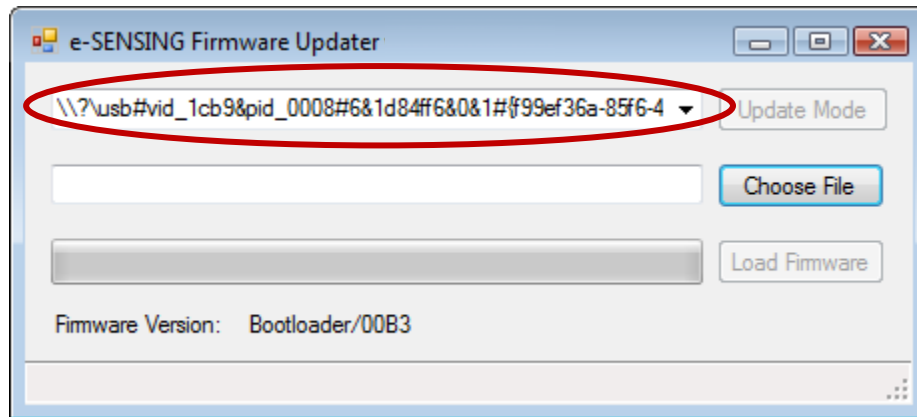

If this does not happen after 30 seconds, close then reopen the Firmware Updater program.

4. Press **Choose File**. Select the file (*.sfw) you want to use for update.
5. Press **Load Firmware**. The progress bar will show the progress of the firmware update. When the update is complete, the SLICE Base will reboot.
6. After reboot, the serial number and new firmware version will be shown. The status bar will indicate that the firmware update was successful.

